



SERVICE MANUAL

226D SKID STEER LOADER

Printed by
Heavy Equipment Manuals
v2.20

Printed in U.S.A

This is the sample of the manual click
on

the download link for complete
manual

DOWNLOAD LINK

For some reason if link does not work
download this pdf and then click

Disassembly and Assembly _____	2
Schematic _____	700
Specifications _____	875
Systems Operation _____	983
Torque Specifications _____	2550
Troubleshooting _____	2601

UENR4243 239D, 232D Skid Steer Loaders Engine Supplement _____	2
UENR4245 239D, 232D Skid Steer Loaders Machine Systems _____	100
UENR4246 239D, 232D Skid Steer Loaders Powertrain _____	230
UENR4528 C2.2 Engines for Caterpillar Built Machines _____	339

Air Cleaner - Remove and Install _____	3
Alternator - Remove and Install _____	6
Battery and Battery Cable - Separate and Connect _____	8
Cab - Tilt _____	10
Coolant Tank - Remove and Install _____	13
Crankcase Breather - Remove and Install _____	15
Crankshaft Pulley - Remove and Install _____	17
Diesel Oxidation Catalyst - Remove and Install _____	21
Electric Starting Motor - Remove and Install _____	23
Electronic Control Module (ECM) - Remove and Install _____	25
Engine - Install _____	27
Engine - Remove _____	33
Engine Enclosure - Remove and Install _____	40
Engine Oil Pan - Remove and Install _____	43
Exhaust Cooler (NRS) - Remove and Install _____	45
Exhaust Pipe - Remove and Install _____	47
Fuel Cooler - Remove and Install _____	49
Fuel Filter and Water Separator - Remove and Install _____	51
Fuel Priming Pump - Remove and Install _____	54
Gear Motor (Fan) - Assemble _____	56
Gear Motor (Fan) - Disassemble _____	60
Gear Motor (Fan) - Remove and Install _____	64
Inlet Air Temperature Sensor - Remove and Install _____	67
Pressure Sensor (Air Inlet Manifold) - Remove and Install _____	69
Pump Drive Coupling - Remove and Install _____	71
Radiator Guard - Remove and Install _____	73
Radiator, Aftercooler, and Hydraulic Oil Cooler - Remove and Install _____	75
Refrigerant Compressor - Remove and Install _____	81
System Pressure - Release _____	84
Temperature Sensor (Exhaust Outlet) - Remove and Install _____	86

Turbocharger - Remove and Install _____	88
Valve Mechanism Cover - Remove and Install _____	90
Water Pump - Remove and Install _____	93
Water Temperature Regulator - Remove and Install _____	97

Previous Screen

Product: SKID STEER LOADER

Model: 226D SKID STEER LOADER HRD

Configuration: 226D Skid Steer Loader HRD00001-UP (MACHINE) POWERED BY C2.2 Engine

Disassembly and Assembly

239D and 249D Compact Track Loaders and 226D and 232D Skid Steer Loaders Engine Supplement

Media Number -UENR4243-00

Publication Date -01/05/2015

Date Updated -26/05/2015

i06038381

Air Cleaner - Remove and Install

SMCS - 1051-010

Removal Procedure



WARNING

Hot engine components can cause injury from burns. Before performing maintenance on the engine, allow the engine and the components to cool.

1. Refer to Operation and Maintenance Manual, "Radiator Tilting".

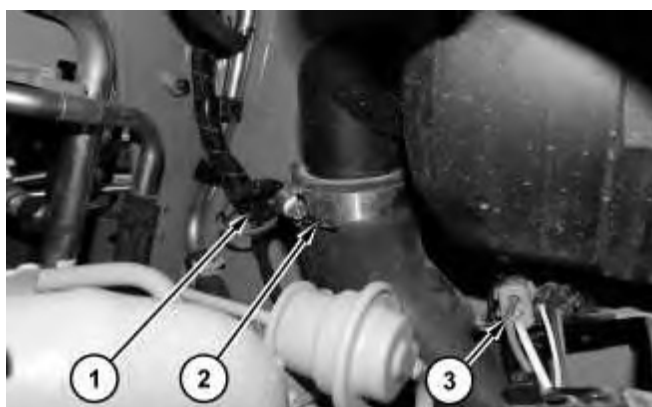


Illustration 1

g03784700



Illustration 2

g03784719

2. Disconnect harness assembly (1) and (3). Disconnect hose (2). Remove fuse assembly (4) and set aside.

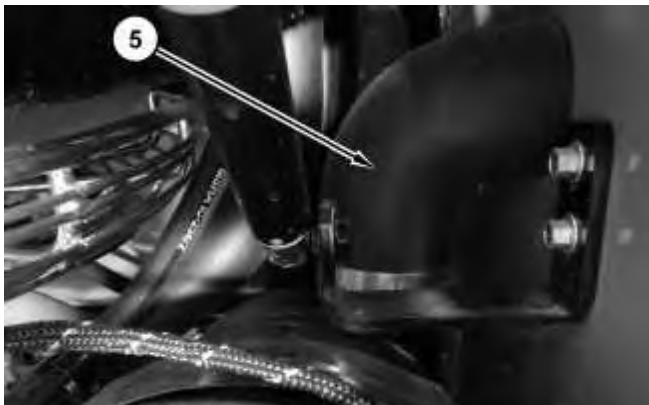


Illustration 3

g03784764

3. Disconnect hose (5) .
-



Illustration 4

g03784767

4. Remove bolts (7). Remove air cleaner assembly (6) .

Installation Procedure

1. Install air cleaner housing (6) in the reverse order of removal.
 - a. Tighten bolts (7) to a torque of $25 \pm 3 \text{ N}\cdot\text{m}$ ($221 \pm 27 \text{ lb in}$).

Previous Screen

Product: SKID STEER LOADER

Model: 226D SKID STEER LOADER HRD

Configuration: 226D Skid Steer Loader HRD00001-UP (MACHINE) POWERED BY C2.2 Engine

Disassembly and Assembly

239D and 249D Compact Track Loaders and 226D and 232D Skid Steer Loaders Engine Supplement

Media Number -UENR4243-00

Publication Date -01/05/2015

Date Updated -26/05/2015

i06048971

Alternator - Remove and Install

SMCS - 1405-010

Removal Procedure

1. If equipped, turn the battery disconnect switch to the OFF position. If not equipped with battery disconnect switch, refer to Operation and Maintenance Manual, "Battery or Battery Cable - Inspect/Replace".



Illustration 1

g03789638

2. Remove cover (1) .



Illustration 2

g03783305

3. Disconnect harness assembly (2) .

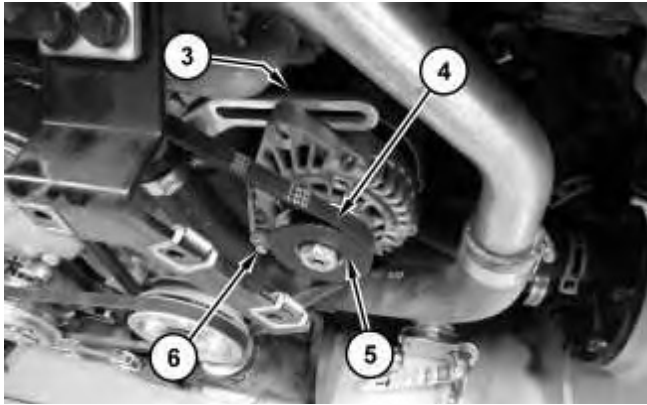


Illustration 3

g03783308

4. Remove belt (4). Refer to Operation and Maintenance Manual, "Belts - Inspect/Adjust/Replace" to remove and install belt.
5. Loosen bolt (3). Remove bolt (6) and alternator (5) .

Installation Procedure

1. Install alternator (6) in the reverse order of removal.
 - a. Tighten cable assembly (2) to a torque of $8 \pm 2 \text{ N}\cdot\text{m}$ ($71 \pm 18 \text{ lb in}$).

Previous Screen

Product: SKID STEER LOADER

Model: 226D SKID STEER LOADER HRD

Configuration: 226D Skid Steer Loader HRD00001-UP (MACHINE) POWERED BY C2.2 Engine

Disassembly and Assembly

239D and 249D Compact Track Loaders and 226D and 232D Skid Steer Loaders Engine Supplement

Media Number -UENR4243-00

Publication Date -01/05/2015

Date Updated -26/05/2015

i06027029

Battery and Battery Cable - Separate and Connect

SMCS - 1401-029-KA

Removal Procedure

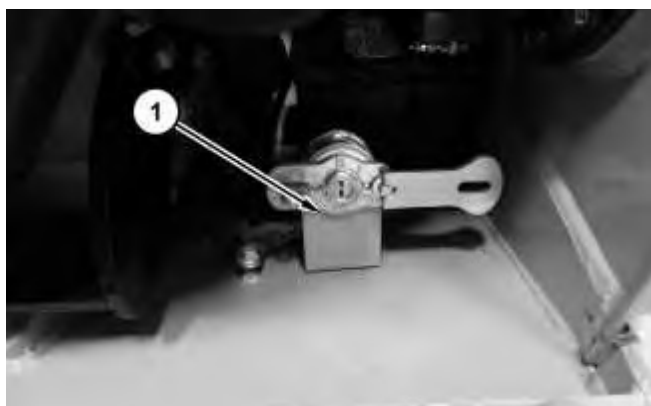


Illustration 1

g03783194

1. Remove battery disconnect switch (1) if equipped.



Illustration 2

g03783229

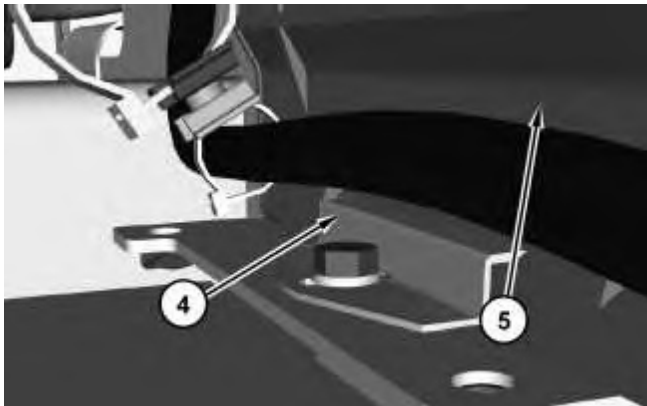


Illustration 3

g03783235

2. Disconnect cable assemblies (2) and (3). Remove bracket (4). Remove battery (5). The weight of battery (5) is approximately 23 kg (50 lb).

Installation Procedure

1. Install battery (5) in the reverse order of removal.
 - a. Tighten cable assemblies (2) and (3) to a torque of $7 \pm 2 \text{ N}\cdot\text{m}$ ($64 \pm 14 \text{ lb in}$).

[Previous Screen](#)

Product: SKID STEER LOADER

Model: 226D SKID STEER LOADER HRD

Configuration: 226D Skid Steer Loader HRD00001-UP (MACHINE) POWERED BY C2.2 Engine

Disassembly and Assembly

239D and 249D Compact Track Loaders and 226D and 232D Skid Steer Loaders Engine Supplement

Media Number -UENR4243-00

Publication Date -01/05/2015

Date Updated -26/05/2015

i06040017

Cab - Tilt

SMCS - 7301-084

Raising the Cab



WARNING

Do not go beneath cab unless cab is empty and support lever is engaged.

Failure to follow the instructions or heed the warnings could result in injury or death.



WARNING

Do not tilt the cab using an open door. The door must be closed and latched when lifting the cab. The door may become dislodged from its hinges and may cause serious personal injury or death.

1. Park the machine on level ground.

2. If you tilt the cab upward with the loader lift arms in the RAISED position, engage the brace for the loader lift arms. Refer to Operation and Maintenance Manual, "Loader Lift Arm Brace Operation" for the process for engaging the brace for the loader lift arms.
3. Close the cab door and ensure that the door is latched.

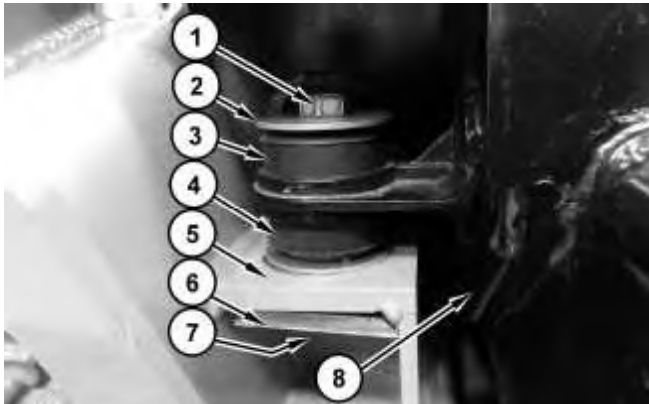


Illustration 1

g03785489

4. Remove bolt (1). Remove washer (2), rubber mount (3), rubber mount (4), washer (5), plate (6), and nut (7) .
- Note:** Note the location of the rubber mounts and the spacers for assembly purposes.
5. Raise cab (8) .

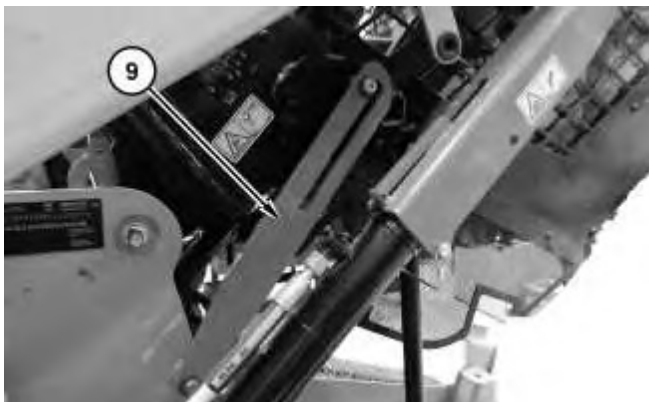


Illustration 2

g03785578

6. Raise the cab until the cab support lever (9) is in the ENGAGED position.

This is the sample of the sample click
on

the download link for complete
manual

DOWNLOAD LINK

For some reason if link does not work
download this pdf and then click

Lowering the Cab

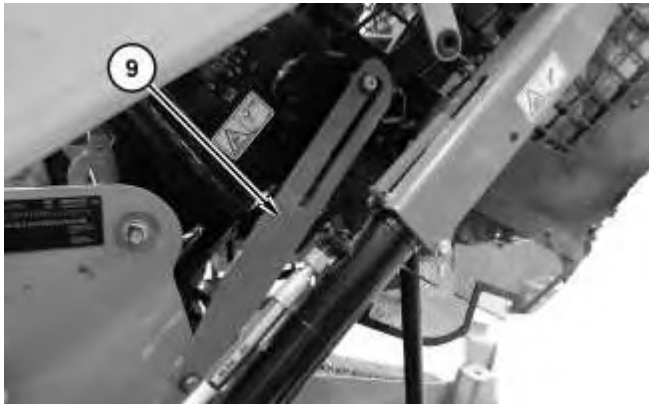


Illustration 3

g03785578

1. Raise the cab. With the help of another person, release the cab support lever (9) .

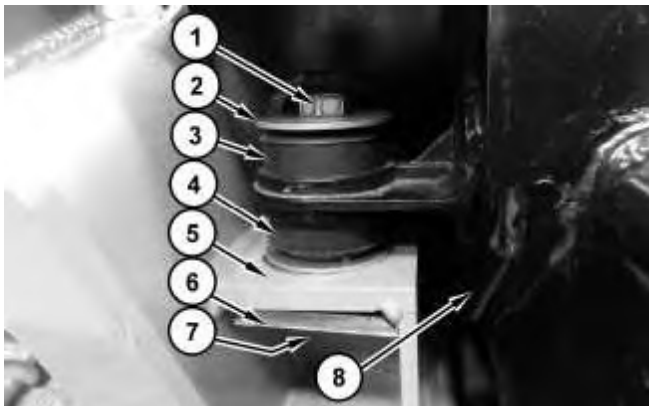


Illustration 4

g03785489

2. Lower cab (8) .
3. Install nut (7), plate (6), washer (5), rubber mount (4), rubber mount (3), washer (2) and bolt (1). Tighten bolt (1) to a torque of $125 \pm 10 \text{ N}\cdot\text{m}$ ($92 \pm 7 \text{ lb ft}$).

Previous Screen

Product: SKID STEER LOADER

Model: 226D SKID STEER LOADER HRD

Configuration: 226D Skid Steer Loader HRD00001-UP (MACHINE) POWERED BY C2.2 Engine

Disassembly and Assembly

239D and 249D Compact Track Loaders and 226D and 232D Skid Steer Loaders Engine Supplement

Media Number -UENR4243-00

Publication Date -01/05/2015

Date Updated -26/05/2015

i06049715

Coolant Tank - Remove and Install

SMCS - 1354-010; 1354; 1377-010; 1377-010-TP

Removal Procedure

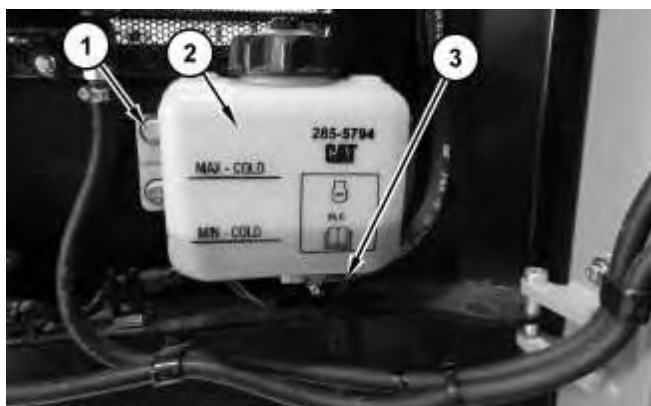


Illustration 1

g03790211

1. Disconnect hose assembly (3). Remove bolts (1) to remove coolant tank (2) .

Installation Procedure

1. Install coolant tank (2) in the reverse order of removal.

Copyright 1993 - 2020 Caterpillar Inc.

All Rights Reserved.

Private Network For SIS Licensees.

Previous Screen

Product: SKID STEER LOADER

Model: 226D SKID STEER LOADER HRD

Configuration: 226D Skid Steer Loader HRD00001-UP (MACHINE) POWERED BY C2.2 Engine

Disassembly and Assembly

239D and 249D Compact Track Loaders and 226D and 232D Skid Steer Loaders Engine Supplement

Media Number -UENR4243-00

Publication Date -01/05/2015

Date Updated -26/05/2015

i06180651

Crankcase Breather - Remove and Install

SMCS - 1317-010; 1317-011; 1317-012

Removal Procedure

NOTICE

Keep all parts clean from contaminants.

Contaminants may cause rapid wear and shortened component life.



Illustration 1

g03839347

1. Remove hose (1) .

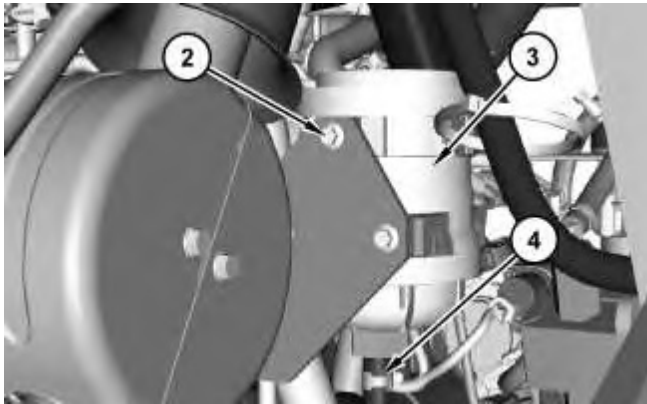


Illustration 2

g03839359

2. Remove hose (4). Remove bolts (2) and crankcase breather (3) .

Installation Procedure

1. Install crankcase breather (3) in the reverse order of removal.

Previous Screen

Product: SKID STEER LOADER

Model: 226D SKID STEER LOADER HRD

Configuration: 226D Skid Steer Loader HRD00001-UP (MACHINE) POWERED BY C2.2 Engine

Disassembly and Assembly

239D and 249D Compact Track Loaders and 226D and 232D Skid Steer Loaders Engine Supplement

Media Number -UENR4243-00

Publication Date -01/05/2015

Date Updated -26/05/2015

i06042724

Crankshaft Pulley - Remove and Install

SMCS - 1205-010

Removal Procedure

Table 1

Required Tools			
Tool	Part Number	Description	Qty
A	8S-2264	Puller	1
	-	Bolt	3

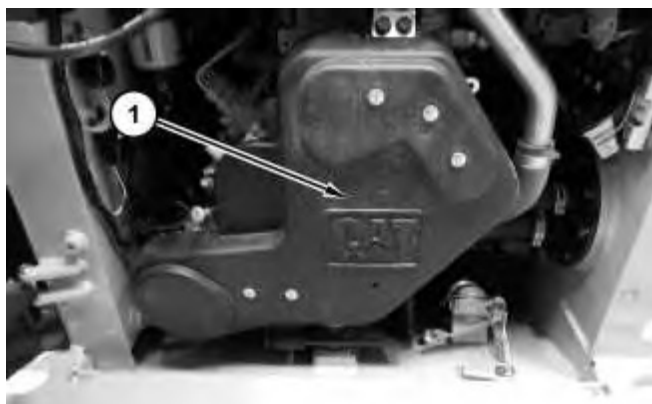


Illustration 1

g03783300

1. Remove cover (1) .

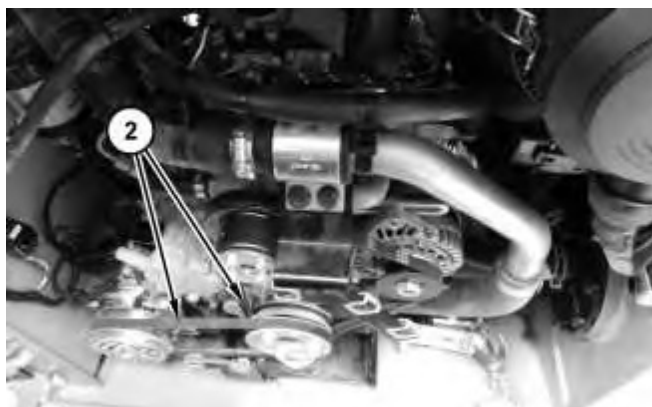
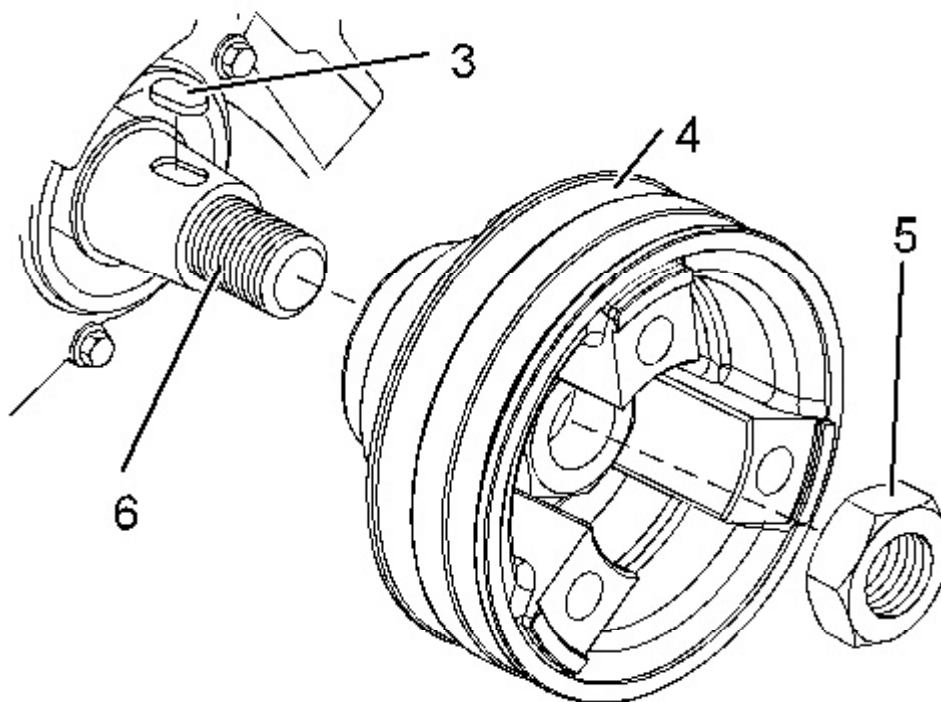


Illustration 2

g03786576

2. Remove the belts (2). Refer to Operation and Maintenance Manual, "Belts - Inspect/Adjust/Replace" to remove and install belt.



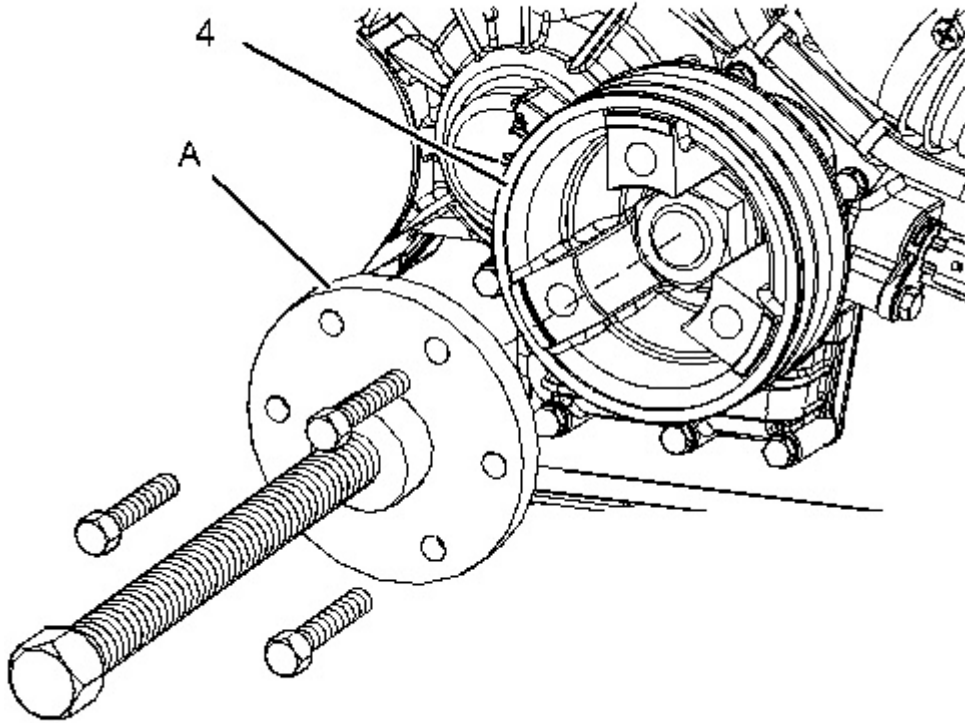


Illustration 4

g03786507

3. Loosen nut (5) .

Note: Do not remove the nut at this time.

4. Install Tooling (A) to crankshaft pulley (4). Use Tooling (A) in order to remove crankshaft pulley (4) from crankshaft (6) .
5. Remove Tooling (A) .
6. Remove nut (5) .
7. Remove pulley (4) from crankshaft (6) .
8. Remove woodruff key (3) from crankshaft (6) .

Installation Procedure

1. Install crankshaft pulley (4) in the reverse order of removal.

- a. Lubricate nut (5) with clean engine oil and install the nut. Tighten nut (5) to a torque of 304 N·m (224 lb ft).

Previous Screen

Product: SKID STEER LOADER

Model: 226D SKID STEER LOADER HRD

Configuration: 226D Skid Steer Loader HRD00001-UP (MACHINE) POWERED BY C2.2 Engine

Disassembly and Assembly

239D and 249D Compact Track Loaders and 226D and 232D Skid Steer Loaders Engine Supplement

Media Number -UENR4243-00

Publication Date -01/05/2015

Date Updated -26/05/2015

i06051200

Diesel Oxidation Catalyst - Remove and Install

SMCS - 1075-010; 1091-010

Removal Procedure

Start By:

- A. Tilt cab.

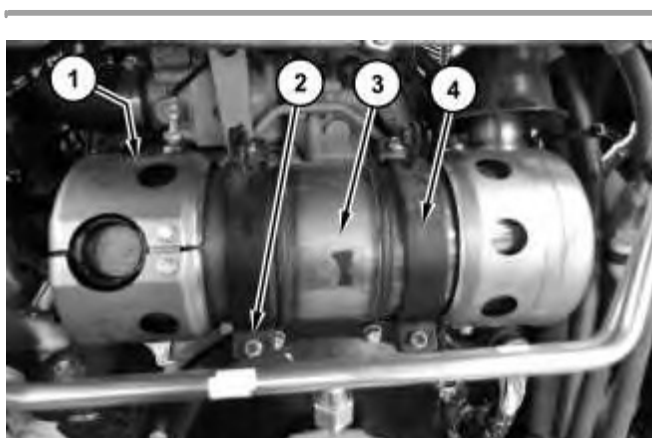


Illustration 1

g03791186

1. Remove bolts (1). Remove nuts (2). Remove brackets (4). Remove DOC canister (3) .

Installation Procedure

1. Install DOC canister (3) in the reverse order of removal.

[Copyright 1993 - 2020 Caterpillar Inc.](#)

[All Rights Reserved.](#)

[Private Network For SIS Licensees.](#)

Thu Feb 20 13:42:05 UTC+0530 2020

[Previous Screen](#)

Product: SKID STEER LOADER

Model: 226D SKID STEER LOADER HRD

Configuration: 226D Skid Steer Loader HRD00001-UP (MACHINE) POWERED BY C2.2 Engine

Disassembly and Assembly

239D and 249D Compact Track Loaders and 226D and 232D Skid Steer Loaders Engine Supplement

Media Number -UENR4243-00

Publication Date -01/05/2015

Date Updated -26/05/2015

i06049099

Electric Starting Motor - Remove and Install

SMCS - 1453-010

Removal Procedure



Accidental engine starting can cause injury or death to personnel working on the equipment.

To avoid accidental engine starting, disconnect the battery cable from the negative (–) battery terminal. Completely tape all metal surfaces of the disconnected battery cable end in order to prevent contact with other metal surfaces which could activate the engine electrical system.

Place a Do Not Operate tag at the Start/Stop switch location to inform personnel that the equipment is being worked on.

-
1. If equipped, turn the battery disconnect switch to the OFF position. If not equipped with battery disconnect switch, refer to Operation and Maintenance Manual, "Battery or Battery Cable - Inspect/Replace".
-

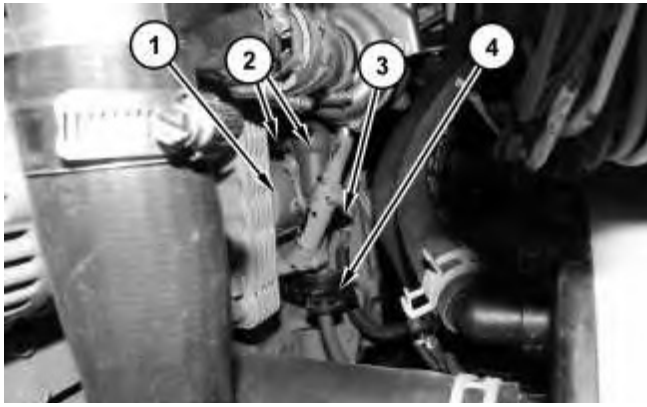


Illustration 1

g03789829

2. Remove cable strap (4) .
3. Remove harness assemblies (2) .
4. Remove bolts (3) and electric starting motor (1) .

Installation Procedure

1. Install electric starting motor (1) in the reverse order of removal.
 - a. Tighten the nut (Terminal B) for cable assembly (2) to a torque of 13 ± 2 N·m (115 ± 18 lb in).

Previous Screen

Product: SKID STEER LOADER

Model: 226D SKID STEER LOADER HRD

Configuration: 226D Skid Steer Loader HRD00001-UP (MACHINE) POWERED BY C2.2 Engine

Disassembly and Assembly

239D and 249D Compact Track Loaders and 226D and 232D Skid Steer Loaders Engine Supplement

Media Number -UENR4243-00

Publication Date -01/05/2015

Date Updated -26/05/2015

i06051498

Electronic Control Module (ECM) - Remove and Install

SMCS - 1901-010; 7600; 7610-010-MCH

Removal Procedure

1. Refer to Operation and Maintenance Manual, "Battery or Battery Cable - Inspect/Replace"
2. Refer to Operation and Maintenance Manual, "Radiator Tilting".

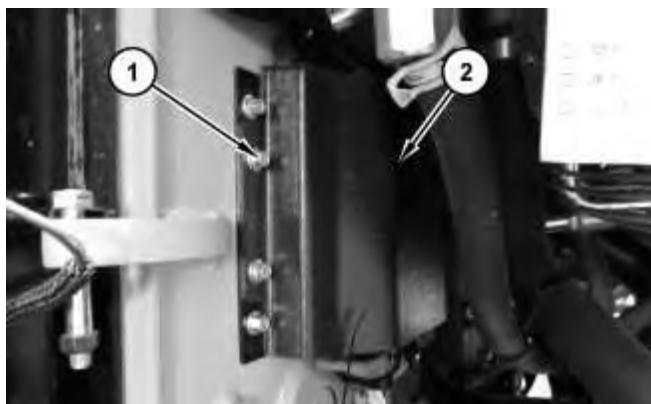


Illustration 1

g03791319

3. Remove bolts (1) and cover (2) .

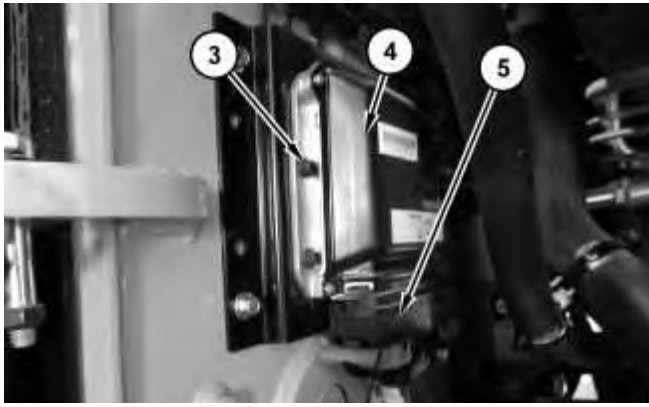


Illustration 2

g03791328

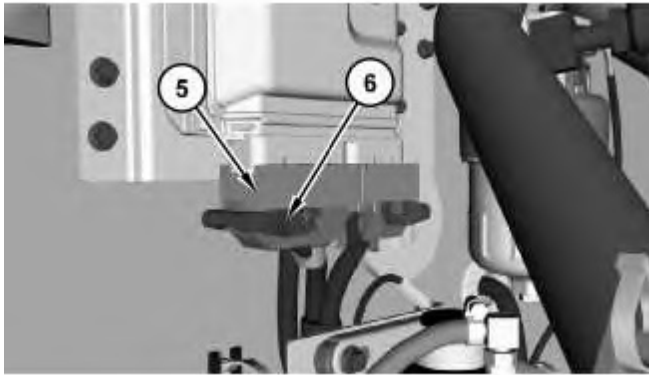


Illustration 3

g03828839

Note: Use locking tabs (6) to remove and install harness assemblies (5). Pull out locking tabs (6) to remove harness assemblies (5). Push in locking tabs (6) to install harness assemblies (5) .

4. Disconnect harness assembly (5). Remove bolts (3) and electronic control module (4) .

Installation Procedure

1. Install electronic control module (4) in the reverse order of removal.
 - a. Tighten bolts (1) and (3) to a torque of $7.5 \pm 0.5 \text{ N}\cdot\text{m}$ ($66 \pm 4 \text{ lb in}$).

Previous Screen

Product: SKID STEER LOADER

Model: 226D SKID STEER LOADER HRD

Configuration: 226D Skid Steer Loader HRD00001-UP (MACHINE) POWERED BY C2.2 Engine

Disassembly and Assembly

239D and 249D Compact Track Loaders and 226D and 232D Skid Steer Loaders Engine Supplement

Media Number -UENR4243-00

Publication Date -01/05/2015

Date Updated -26/05/2015

i06059945

Engine - Install

SMCS - 1000-012

Installation Procedure

Table 1

Required Tools			
Tool	Part Number	Part Description	Qty
A	368-0005	Lift Assembly	1
B	387-9124	Wrench Adapter	1

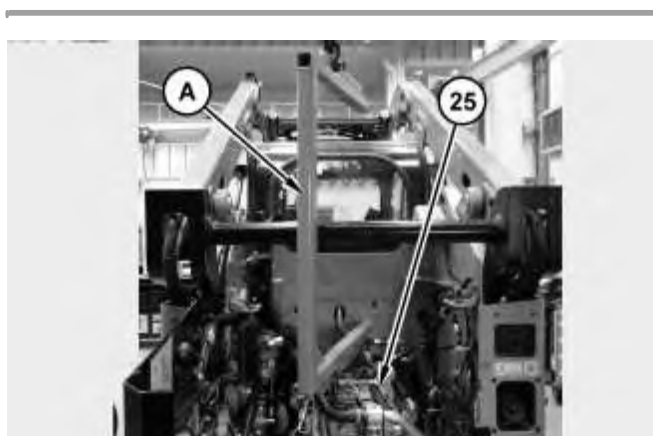


Illustration 1

g03794384

1. Using a suitable lifting device and Tooling (A) install engine (25). The weight of engine (25) is approximate 278 kg (612 lb).

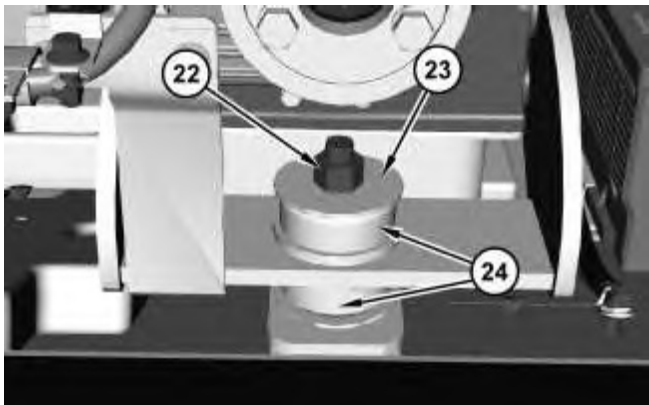


Illustration 2

g03828840

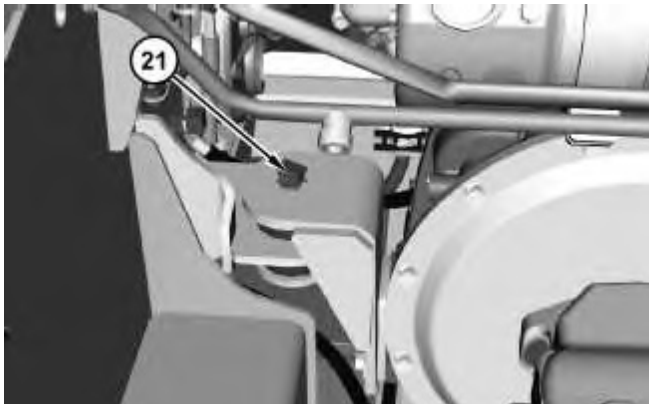


Illustration 3

g03794328

2. Install mounts (24), washer (23), and nut (22).

This is the sample of the sample click
on

the download link for complete
manual

DOWNLOAD LINK

For some reason if link does not work
download this pdf and then click